



2231 E. Glendale Ave.

Appleton, WI 54911

515-987-5765

[www.victoryglass.com](http://www.victoryglass.com)

# Seeburg Free Play Credit & Cancel Unit



**For Seeburg Models: A, B, C, G, W**

**Victory Glass P/N 49-7105**

## Installation Instructions

Thank you for purchasing this solid state Credit and Cancel Unit (CCU) for your Seeburg jukebox! Our CCU replaces the original troublesome mechanical CCU, while providing safe free play with latch solenoid protection—the same great feature our Free Play Adapters have included for over 20 years.


1. Unplug the jukebox from the wall socket.
2. Open the back door of the jukebox, and unplug the two plugs from the existing CCU (the larger 8-pin plug is for the selection keyboard, and the smaller one is for the coin switches, if present, as they are sometimes removed.)
3. Remove the 3 wing nuts securing the rear service door cover and place the cover aside.
4. Locate the credit unit and cut all of the wires between the CCU and main chassis.

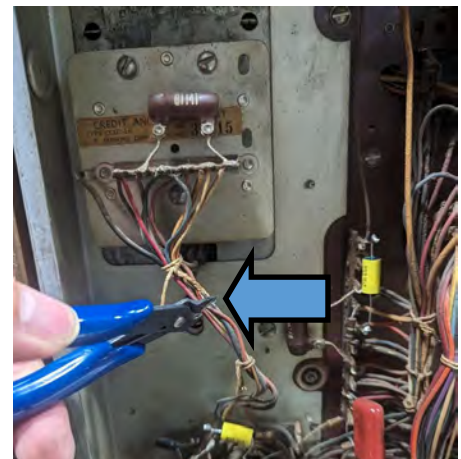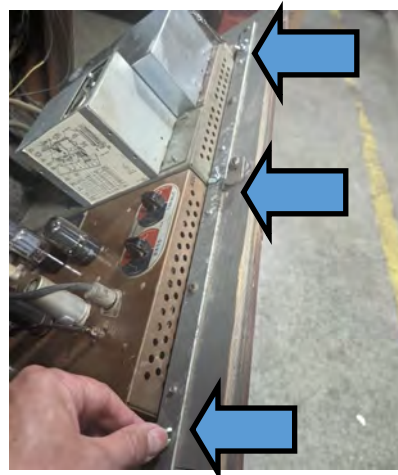

5. Loosen the four mounting screws that hold the CCU in place.


6. From the top side of the selection receiver, remove the CCU by lifting it upwards and off the selection receiver chassis.

7. Place the new CCU in place with the socket facing upwards and tighten the 4 mounting screws.

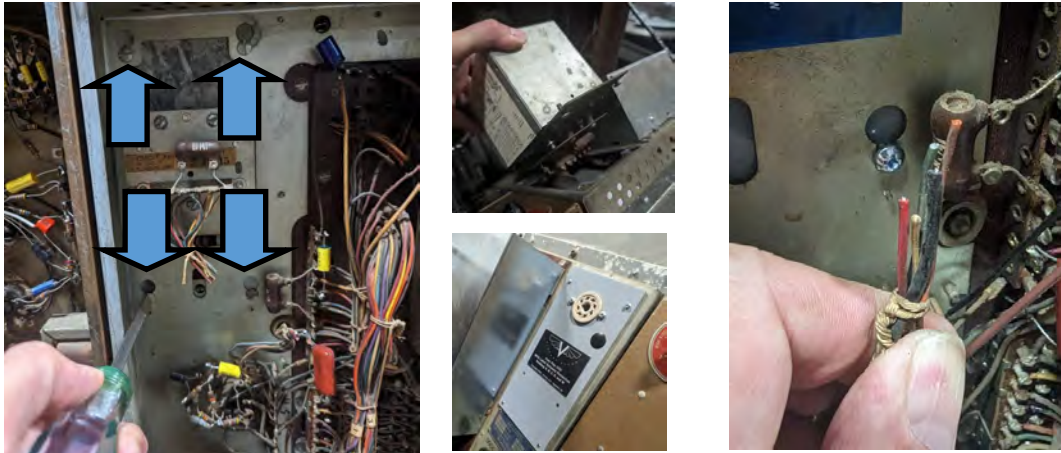

8. Connect the black wire from the new CCU to the terminal position labeled “9” on the selection receiver terminal strip, and the brown wire to the terminal position labeled “6” on the selection receiver terminal strip. You may either solder the wires directly to the terminals, or splice the new wires to the old wires using butt splices. Cut or arrange the remaining unused wires at different lengths (photo above-right) and tape (insulate) the unused wires.

9. Connect the 8-pin plug on the top side of the new CCU. (CAUTION! Beware of a possible broken center key on the 8-pin plug! If it is broken or missing, be sure to plug it into the new credit unit properly.) The smaller coin switch plug will remain unplugged.

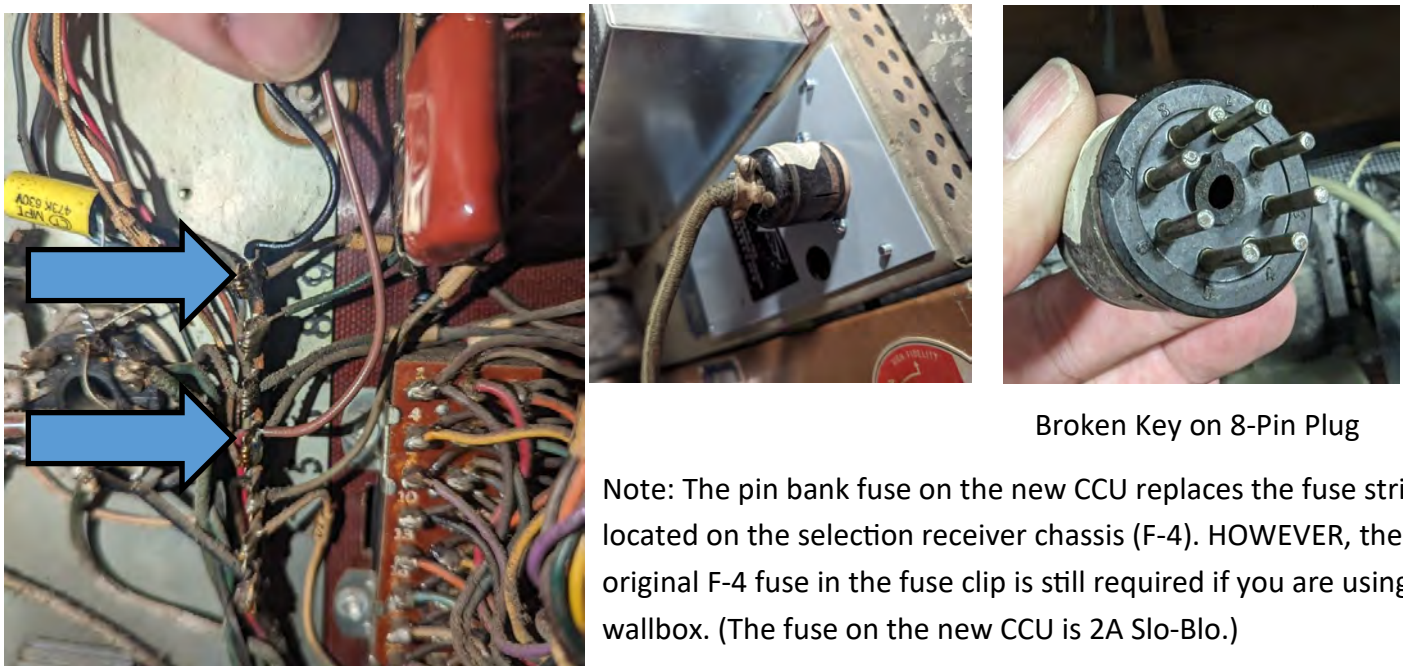

Broken Key on 8-Pin Plug

Note: The pin bank fuse on the new CCU replaces the fuse strip located on the selection receiver chassis (F-4). HOWEVER, the original F-4 fuse in the fuse clip is still required if you are using a wallbox. (The fuse on the new CCU is 2A Slo-Blo.)

***Installation is Complete!***