



2231 E. Glendale Ave.
Appleton, WI 54911
920-SEEBURG (733-2874)
www.victoryglass.com




Seeburg Solid State Pinbank Wireless Wallbox Receiver Board Installation Instructions

Thank you for purchasing this Wireless Wallbox Receiver from Victory Glass!

The Victory Glass Wireless Wallbox System allows you to connect any supported wallbox with any supported jukebox, without the hassle of running wires!

This Seeburg Solid State Pinbank Wireless Wallbox Receiver Board will receive signals broadcast by a Victory Glass Wireless Wallbox Transmitter, and enter them directly into the memory of the Solid State Pinbank.

This board is only compatible with our “Version 2” pinbanks, released in fall of 2025. If you have an earlier Solid State Pinbank, you will need our Standard Wireless Wallbox Receiver with Seeburg-Ready Cable (VG Part# 87-7486) instead.

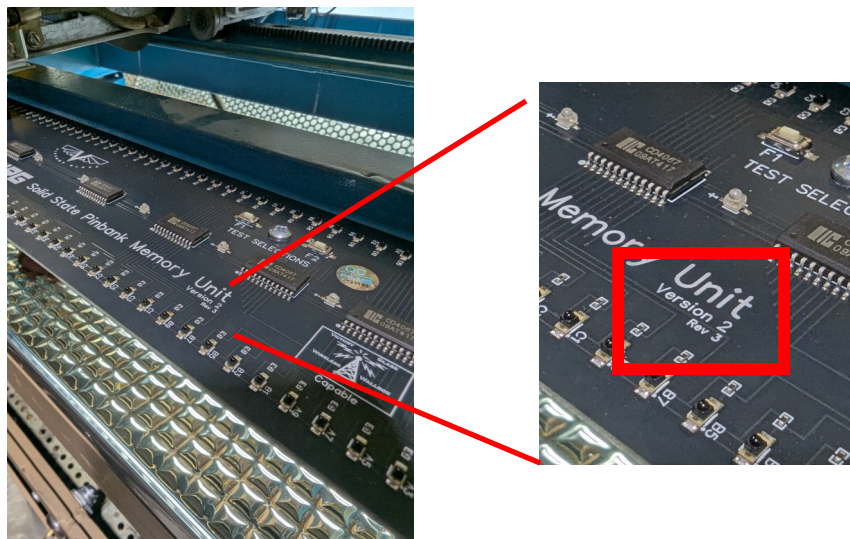

Solid State Pinbank Version 2 Identification

Receiver Installation

1. Ensure the power to the jukebox is turned off.
2. Find the wireless receiver board socket in the top right corner of the solid state pinbank main board.
3. If there is a blank board in the receiver board socket, remove and discard the blank board.
4. Move the “Wireless—Yes / No” switch is set to “Yes”. (Note—early Version 2 boards do not have this switch.) See below-left photo.
5. Install the wireless receiver board as shown below—center photo. (The antenna will point towards the back of the jukebox.)
6. Set the channel rotary switch to match the wallbox(es) you would like this jukebox to receive selections from. (Note—Channel 0 is None / Disabled.) See below-right photo.

Installation Is Complete!

