



2231 E. Glendale Ave.


Appleton, WI 54911

515-987-5765

[www.victoryglass.com](http://www.victoryglass.com)

## Seeburg SHP1, SHP2, SHP3 Amplifier Bias Trimmer Board Installation Instructions

1. Begin by breaking off the mounting tabs of the two bias potentiometers, which are located on the edge of the amplifier, as shown below-left.
2. Working with one pot at a time, cut the wires off the old pot and move them to the Phoenix terminal strips on the new trimmer board. You will have two wires of the same colors on one terminal, and the odd wire on the other terminal, as shown below-center.
3. Mount the trimmer board to the amplifier using the included 10-32 screws, spacers, and nuts, as shown below-right.

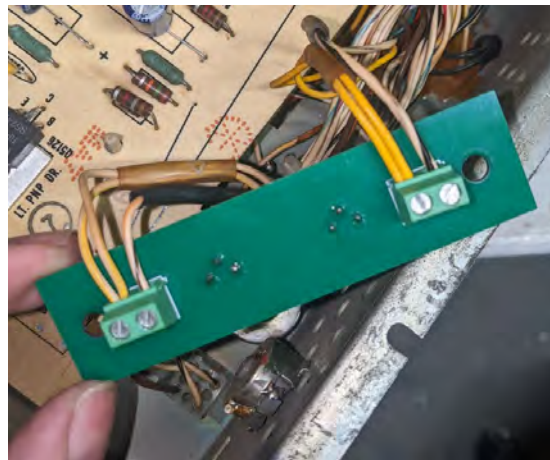

4. Power the amplifier on with **no** input signal being fed into the amplifier. Place one probe in the probe socket, touch the other probe on the nearby transistor case (be careful not to short from the transistor to the heat sink, as they are insulated from each other). Adjust the potentiometer until the voltage is between 2 and 20mV. Repeat for the other channel.

